


Top 10 tips

To keep your Alfa Laval Contherm / Convap in tip top condition

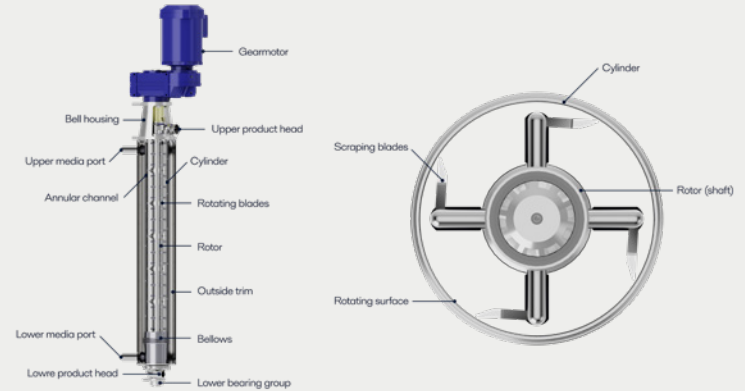

- 01 Make sure that the operating conditions (temperatures and flow rates) comply with the design specifications.
- 02 To start, turn on product flow, then Contherm / Convap rotor, then the media. Remember to turn on flush seal media if so equipped when starting the rotor.
- 03 Dress scraper blades regularly to optimize heat transfer and protect cylinder.
- 04 Replace seal o-rings and inspect seal components, scraper blade's, cylinder and rotor weekly as well as each time the system is opened for service.
- 05 Monitor equipment regularly for unusual vibration indicating bearing failure or motor misalignment.
- 06 Change hydraulic oil per manufactures recommendations or contamination occurs.
- 07 Never operate Contherms when void of product, water or CIP solution and never leave CIP or product in system for extended periods.
- 08 Monitor effectiveness of CIP.
- 09 Maintain adequate stock and only use genuine Alfa Laval spare parts and services to achieve best performance and extend equipment life. Sign a Service Agreement with Alfa Laval to maximize uptime and save maintenance costs.
- 10 When in doubt, consult the Contherm Parts and Instruction Manual for all service related issues.